



OPERATING AND MAINTENANCE INSTRUCTIONS/
SPARE PARTS

EDITION 01/2017

**Serving the Gas Industry
Worldwide**

Honeywell

4.6 Parts for maintenance purposes

Item no.	Denomination	Number	Part number
7	Sealing ring	6	18842
23	O ring	1	20341
25	O ring	7	20225
27	O ring	2	20285
28	O ring	2	20332
Pilot control stage for pn. resultant value Automatic auxiliary pressure stage			
104	O ring	1	20225
105	Valve insert	1	10000061
117	Piston, pre-assembled	1	10000186
118	O ring	1	20332
119	Pre-formed diaphragm	2	10000191
120	Stem seal	2	10000066
126	O ring	1	20293
133	O ring	1	20226
Pilot stage with metal-harmonica measuring unit			
152	Piston, pre-assembled	1	10000186
155	O ring	1	20225
156	Valve insert	1	10011775
168	O ring	1	20332
169	Pre-formed diaphragm	1	10000191
170	Stem seal	1	10000066
172	O ring	1	20416
174	O ring	1	20317
180	O ring	1	20293
184	Hex collar nut	1	13145
For attachment to elec. drive			
191	O ring	1	20293
196	O ring	1	20326
Pilot stage with diaphragm measuring unit			
204	O ring	1	20225
205	Valve insert	1	10000061
211	O ring	1	20293
217	Piston, pre-assembled	1	10000186
218	O ring	1	20332
219	Pre-formed diaphragm	2	10000191
220	Stem seal	2	10000066
233	Hex collar nut	1	13136
For attachment to elec. drive			
240	O ring	1	20326