

R4795A Flame Safeguard Primary Controls

The R4795A Protectorelay™ Primary Control provides solid state electronic flame safeguard protection for commercial and industrial gas or oil burners. It provides a prepurge period before each start, and intermittent pilot.



- 120V models meet the requirements of Underwriters Laboratories Inc. Standard 795 for mechanical draft and atmospheric burner inputs from 400,000 to 2,500,000 Btu.
- Meets Underwriters Laboratories Inc. requirements for oil burner group 8 when 30, 60, or 90 second prepurge timer is used.
- Selection of solid state, plug-in prepurge timers provides 7, 10, 30, 60, or 90 second prepurge time.
- Includes terminals for connection of air flow switch to prove airflow before prepurge period starts, during purge, and during the entire Run period.
- Choice of interchangeable, color-coded, solid state, plug-in flame signal amplifiers allows use with rectification or ultraviolet type flame detectors.
- Safe-start feature prevents start when flame or flame simulating condition is present.
- Recycles through prepurge if the flame goes out while burner is running. If pilot flame is not re-established, safety switch trips and locks out system.
- A tripped safety switch must be manually reset to restore operation.
- Push-to-reset safety switch is dust-resistant enclosed.
- Optional spdt alarm contacts operate external alarm on safety switch lockout.
- Ignition interference circuit (rectification amplifier only) protects electronic network from high voltage ignition crossover and provides visual indication when interference occurs.

- Solid state circuitry eliminates vacuum tube replacement and increases resistance to vibration. Application of power not required during Off cycle; no tube warmup before starting.
- Easy-to-replace plug-in components result in faster service and reduced inventory.
- Flame current jack, located on the amplifier, provides means of plugging in a microammeter to measure the flame signal with system operating.
- Easy mounting and removal through use of captive mounting screws, which also serve as electrical connections.
- Durable thermoplastic mounting base.
- Models available with -40°F (-40°C) temperature rating.

CONTENTS

<i>Specifications</i>	2
<i>Ordering Information</i>	2
<i>Installation</i>	4
<i>Checkout</i>	8
<i>Operation</i>	11
<i>Troubleshooting</i>	11
<i>Service</i>	13



Specifications

R4795A Flame Safeguard Primary Control recycles once after flame failure to try to re-establish pilot before lockout. Use with R7289A Amplifier and rectifying flame rod, rectifying photocell, or C7012A,C Purple Peeper Ultraviolet Flame Detector; or with R7290A Amplifier and C7027A, C7035A, or C7044A Minipeeper Ultraviolet Flame Detector.

AMBIENT TEMPERATURE RATINGS:

Minimum: -20°F (-29°C). Special models to -40°F (-40°C).
Maximum: +125°F (52°C) at 60 Hz; +115°F (46°C) at 50 Hz. -40°F (-40°C) models have maximum ambient of +115°F (46°C) at 60 Hz, +105°F (40°C) at 50 Hz. Subtract 10°F (6°C) when optional alarm contacts are included.

ELECTRICAL RATINGS:

Voltage and Frequency: Single voltage models only: 100V, 120V, 200V, 220V, 50/60 Hz. As ordered.

Power Consumption (at 60 Hz):

6.0W max using rectifying flame rod or photocell.
8.0W max using ultraviolet flame detector.

FLAME FAILURE RESPONSE TIME: 0.8 or 3 seconds nominal, as ordered.

SAFETY SWITCH TIMING (LOCKOUT TIMING): 15 seconds nominal.

RECYCLE TIME: Almost immediate after Flame Failure Response Time.

FLAME ESTABLISHING PERIOD: May last up to safety switch lockout time or until flame is recognized by device.

ALARM CONTACTS (Optional): Isolated spdt contacts. Male quick-connect terminals (female quick-connects included). See Terminal Ratings. -40°F (-40°C) models have isolated spdt alarm contacts.

Ordering Information

When purchasing replacement and modernization products from your TRADELINE® wholesaler or your distributor, refer to the TRADELINE® catalog or price sheets for complete ordering number, or specify:

1. Order number.
2. Voltage and frequency.
3. Flame failure response time.
4. Alarm contacts, if desired (included with -40°F [-40°C] models.)

Order separately:

1. R7289A Rectification Amplifier, or R7290A Ultraviolet Amplifier. Specify flame failure response time.
2. Flame detector to match amplifier.
3. Plug-in prepurge timer model number and timing (7, 10, 30, 60, or 90 seconds).
4. Q270A1024 Mounting Subbase.
5. Accessories, if desired.

If you have additional questions, need further information, or would like to comment on our products or services, please write or phone:

1. Your local Honeywell Home and Building Control sales office (check white pages of phone directory).
2. Home and Building Control Customer Logistics
Honeywell Inc., 1985 Douglas Drive North
Minneapolis, Minnesota 55422-4386

In Canada—Honeywell Controls Limited/Honeywell Limitée, 35 Dynamic Drive, Scarborough, Ontario M1V 4Z9. International sales and service offices in all principal cities of the world. Manufacturing in Australia, Canada, Finland, France, Germany, Japan, Mexico, Netherlands, Taiwan, United Kingdom, U.S.A.

TERMINAL RATINGS:

Terminal	Load	Rating
3	Pilot Valve	125 VA pilot duty.
	Intermittent Ignition ^a	360 VA.
4	Interrupted Ignition	360 VA.
5	Main Fuel Valve(s)	125 VA pilot duty, or 25 VA pilot duty plus one or more motorized valves with total rating up to 400 VA opening, 200 VA holding.
6-7	Airflow Switch	0.6A at 30 Vdc.
8	Fan or Burner Motor	9.8A full load, 58.8A locked rotor (inrush) at 120 Vac. 4.9A full load, 29.4A locked rotor (inrush at 220 and 240 Vac.
Isolated Spdt Alarm Terminals (Optional)	Alarm	3A at 24 volts, or 1A at 120 volts, in a suitable wiring enclosure.

^a When ignition is connected to terminal 3, terminal 4 cannot be used.

NOTE: Allowable inrush can be up to ten times the pilot duty rating.

Example:

Pilot duty rating = 125 VA.
At 120V, running current is $125/120 = 1.05A$.
Maximum allowable inrush is 10 times $1.05 = 10.5A$.

DIMENSIONS (Includes Cover and Subbase): Approximately 5 x 5 x 5 in. (127 x 127 x 127 mm).

MOUNTING: Q270A1024 Subbase. Ordered separately.

APPROVALS:

Underwriters Laboratories Inc Listed: 120V models using 30, 60, or 90 second prepurge timers including -40°F (-40°C) rated models; file no. MP268, guide no. MCCZ.

Underwriters Laboratories Inc. Component Recognized: 120 volt models using 7 or 10 second prepurge timers including -40°F (-40°C) rated models; file no. MP268, guide no. MCCZ2.

Canadian Standards Association Certified: 120V models only, including -40°F (-40°C) rated models; file no. LR95329.

Factory Mutual Approved: R4795A 120V models; report no. 18774. -40°F (-40°C) rated models; report no. 19608.1.

American Gas Association Design Certified: File no. 21-6 (F and F1).

ACCESSORIES:

W136A Test Meter (includes 117053 Meter Connector Plug).

Flame Simulator:

203659 Ultraviolet
121708 Rectification
123514B Ultraviolet

117053 Meter Connector Plug

FSP1535 Tester for operational check

Q624 Solid State Spark Generator

118702E Remote Reset Cover, 120 Vac, 60 Hz
202471C Reset Cover for R4795A

ADDITIONAL CONTROLS:

Order all additional controls separately:

Q270A1024 Mounting Subbase.

Plug-In Flame Signal Amplifiers, Rectification Type (Green Backplate): For use with C7004B C7005A, and B, C7008A, or Q179A,C Rectifying Flame Rods (for gas); C7003A, C7010A, C7013A or C7014A Photocells (for oil); or C7012A,C Purple Peeper Ultraviolet Flame Detectors (for gas or oil).

R7289A1004 Amplifier: 3 sec nominal flame failure response.

R7289A1012 Amplifier: 0.8 sec nominal flame failure response.

R7289A1020 Amplifier: 3 sec nominal flame failure response, -40°F (-40°C) ambient temperature.

Ultraviolet Type (Purple Backplate): For use with C7027A, C7035A or C7044A Minipeeper Ultraviolet Flame Detectors (for gas or oil).

R7290A1001 Amplifier: 3 sec nominal flame failure response.

R7290A1019 Amplifier: 0.8 sec nominal flame failure response.

R7290A1027 Amplifier: 3 sec nominal flame failure response, -40°F (-40°C) ambient temperature.

ST71A Plug-In Prepurge Timer (ordered separately):

Minimum Timings: 7, 10, 30, 60, and 90 seconds (as ordered).

Maximum Timings: 8.4, 12, 36, 72, and 108 seconds at room ambient temperature.

Recommended Limits: L404A; L604A,L; L4006A,C,E; L4008A,E,F; L6006A,B: These controllers were Underwriters Laboratories Inc. tested for *breaking* loads only, at 120 Vac, for the total rating of 9.8A full load, plus 360VA ignition, plus 250 VA pilot duty.

Flame Detector: As specified in Plug-In Flame Signal Amplifiers listed above.

Installation



CAUTION

1. Installer must be a trained, experienced, flame safeguard control service technician.
2. Disconnect power supply before beginning installation to prevent electrical shock and equipment damage.
3. All wiring must comply with applicable local electrical codes, ordinances, and regulations.
4. Voltage and frequency of the power supply connected to this control must agree with those marked on the device.
5. Loads connected to the control terminals must not exceed those listed in the Specifications section.
6. All external timers must be Listed or Component Recognized by authorities having jurisdiction for the specific purpose for which they are used.
7. Some authorities having jurisdiction prohibit the wiring of any limit or operating contacts in series with the main fuel valve(s).
8. Perform all required checkout tests after installation is complete.

Follow the burner manufacturer's instructions, if supplied. Otherwise proceed as follows.



CAUTION

Ultraviolet sensing tubes have a life expectancy of 40,000 hours of continuous use within the ambient temperature and voltage ratings. Worn out ultraviolet sensing tubes can result in failure of the sensing tube to properly discriminate between flame conditions.

For systems using R4795A with R7290 Amplifiers, use C7027, C7035 and C7044 Flame Detectors only on burners that cycle On and Off at least once every 24 hours. Appliances with burners that remain on for 24 hours continuously or longer should use the C7012E Flame Detector with the R7247C Amplifier or the C7076A Flame Detector with the R7476A Amplifier as the ultraviolet flame detection system.

LOCATION

Temperature

Install the R4795A where the surrounding temperatures remain within the Ambient Operating Temperature Ratings listed in the Specifications section.

Humidity

Install the R4795A where the relative humidity never reaches the saturation point. Condensation of moisture on the R4795A may cause enough leakage to short the flame signal to ground and prevent the burner from starting.

Vibration

Do not install the R4795A where it could be subject to excessive vibration. Vibration shortens the life of the electronic and mechanical components.

Weather


The R4795A is not designed to be weathertight. If it is installed outdoors, use a suitable weathertight enclosure.

Mounting The Subbase

Locate the subbase where ambient temperature is within the specified rating.

Mount the subbase so the top and bottom are horizontal and the back is vertical. The subbase can lean backward as much as 45 degrees when necessary. See Fig. 1.

Fig. 1—Subbase mounting dimensions in in. (mm).

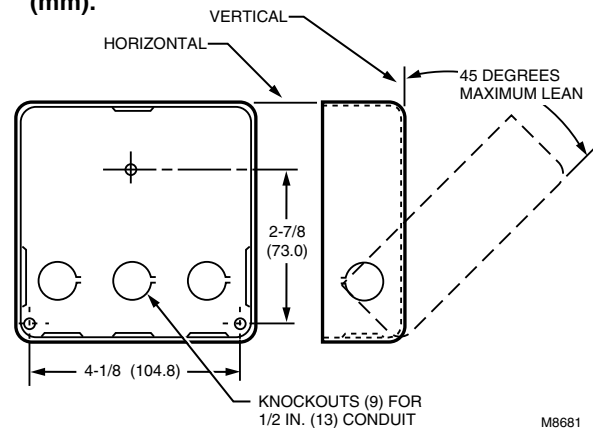

WIRING TO SUBBASE

1. All wiring must comply with applicable codes, ordinances, and regulations. All wiring to the Q270A Universal Mounting subbase must be NEC Class 1.
2. When wiring the Q270A for use with the R4795A, use the terminal designations 8, 7, and 6 (printed in yellow).
3. For normal installations, use moisture-resistant No. 14 wire suitable for at least 167°F (75°C).
4. For high temperature installations, use moisture-resistant No. 14 wire selected for a temperature rating above the maximum operating temperature for all but the ignition and flame detector F leadwires.
 - a. For the ignition, use Honeywell Specification no. R1061012 Ignition Cable or equivalent. This wire is rated at 350°F (175°C) for continuous duty, and up to 500°F (260°C) for intermittent use.
 - b. For the flame detector F leadwire, use Honeywell Specification no. R1298020 or equivalent. This wire is rated up to 400°F (205°C) for continuous duty. It is tested for operation up to 600V and breakdown up to 7500V.


IMPORTANT: Do not run high voltage ignition transformer wires in the same conduit with the flame detector wiring.

5. For ignition installations in a contaminating environment, use Honeywell Specification no. R1239001 High Tension Ignition Cable or equivalent. This wire is very resistant to severe conditions of oil, heat, and corona, and is tested to withstand high voltages up to 25,000V rms in a salt bath for one minute without breakdown. It is rated at 200°F (93°C) for continuous duty and up to 350°F (75°C) for intermittent use.

Wiring Hookups


The typical wiring hookups in Fig. 2 and 3 show the internal line voltage schematic. Contact 3K2 closes when the controller calls for heat. 1K4 closes when prepurge is complete. 2K2 breaks and 2K3 makes when flame is proven. Also see the Operation section.

Fig. 2—Wiring hookup of gas system with interrupted ignition and intermittent pilot.

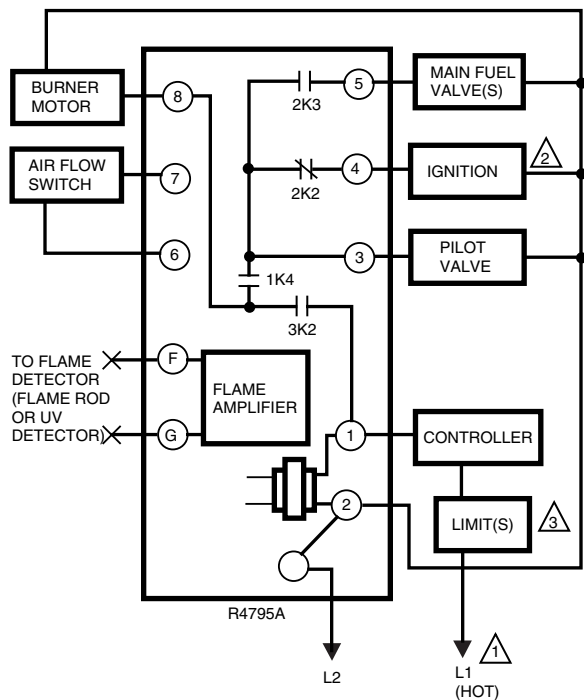

- ⚠️ 1 POWER SUPPLY. PROVIDE DISCONNECT MEANS AND OVERLOAD PROTECTION AS REQUIRED.
 - ⚠️ 2 FOR INTERMITTENT IGNITION, CONNECT IGNITION TO TERMINAL 3.
 - ⚠️ 3 REFER TO SPECIFICATIONS SECTION FOR RECOMMENDED LIMITS.
- M8682

Fig. 3—Wiring hookup of oil system with interrupted ignition.

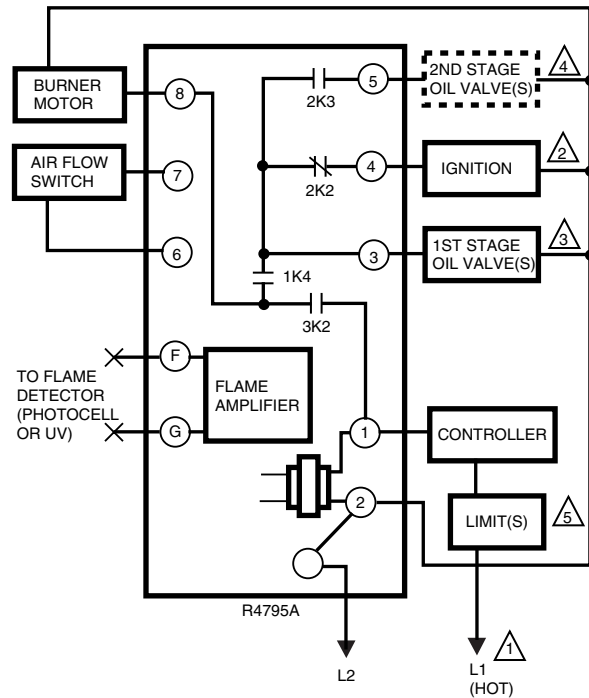

- ⚠️ 1 POWER SUPPLY. PROVIDE DISCONNECT MEANS AND OVERLOAD PROTECTION AS REQUIRED.
- ⚠️ 2 FOR INTERMITTENT IGNITION, CONNECT IGNITION TO TERMINAL 3.
- ⚠️ 3 IMMEDIATE OPENING OIL VALVE V4046B.
- ⚠️ 4 OPTIONAL DELAYED OPENING OIL VALVE V4046A OR V4046B WITH ST70A ELECTRONIC TIME DELAY.
- ⚠️ 5 REFER TO SPECIFICATIONS SECTION FOR RECOMMENDED LIMITS.

M8683

Retrofitting R4795

⚠️ CAUTION

Make wiring connections as specified in Fig. 2, 3, or 4. Do not simply plug the R4795 into the old subbase without first changing the wiring at the subbase.


- Observe the following when retrofitting the R4795:
1. Requires a line voltage controller capable of switching the entire connected electrical load.
 2. Delayed opening oil valve may be retained but its delay is not necessary. Integral ST71A Purge Timer meets the intent of a delayed opening valve.
 3. Refer to Fig. 2, 3 or 4 for proper wiring connections.

Replacing RA890E,F,G with R4795A

1. Disconnect all wires from terminal 1, and splice with solderless connector. (If RA890 has no terminal 1 wiring, disregard this step.)
2. Remove line voltage controller wire from terminal 6 and connect to terminal 1.
3. Move burner motor connection from terminal 3 to terminal 6 on subbase.
4. Remove jumper from T and T and install air switch. If low voltage control was wired to RA890 T-T, remove low voltage control and install line voltage control as shown in Fig. 4.
5. If R482D Relay was used with RA890E, remove it. The R482D is redundant when R4795D is used.
6. Check for proper operation through at least two cycles.

Fig. 4—Replacing RA890E,F,G with R4795A on gas or oil burner.

REPLACING RA890 WITH R4795 ON GAS OR OIL BURNER

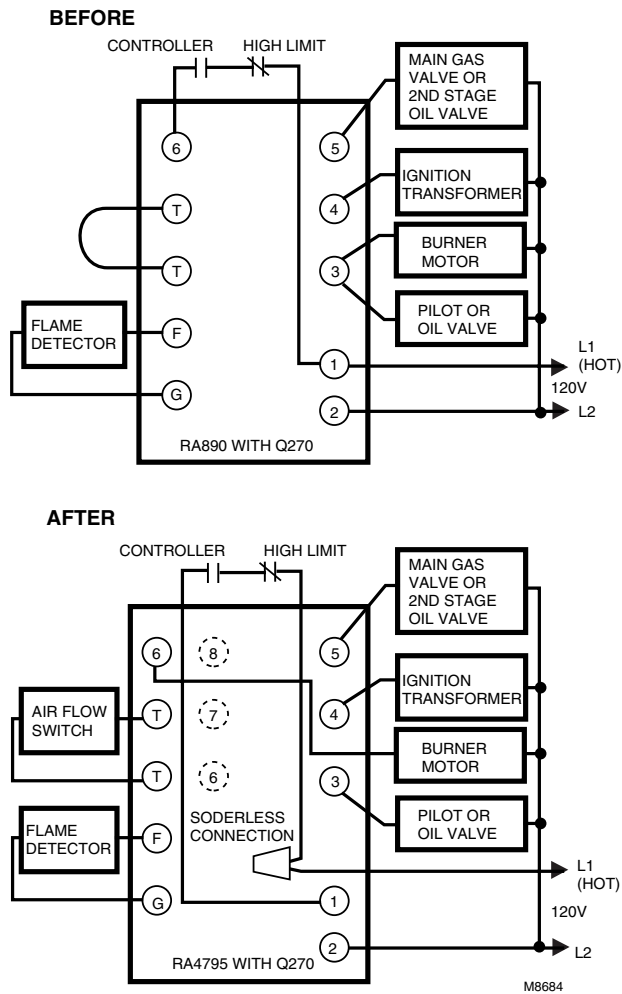

R4795C Replacement

In most cases, the R4795A can directly replace the R4795C. For standing pilot applications where the pilot flame was detected during the off cycle, install a relay as shown in Fig. 5.

Flame Detector Wiring


See Fig. 6.

Alarm Contacts

Models with alarm contacts have three male quick-connect terminals. Three female quick-connect terminals are provided for field installation. To connect leadwires to the female quick-connects, strip 1/4 inch (6.4 mm) insulation from end of leadwire; insert into the quick-connect, and crimp securely with a crimping tool. Fig. 7 shows proper alarm terminal connections.

If a line voltage alarm is used with the R4795, mount the entire control in a suitable enclosure.



Fig. 5—When R4795A replaces R4795C in a standing pilot application, install relay 1R to prevent detection of pilot flame during burner off cycle.

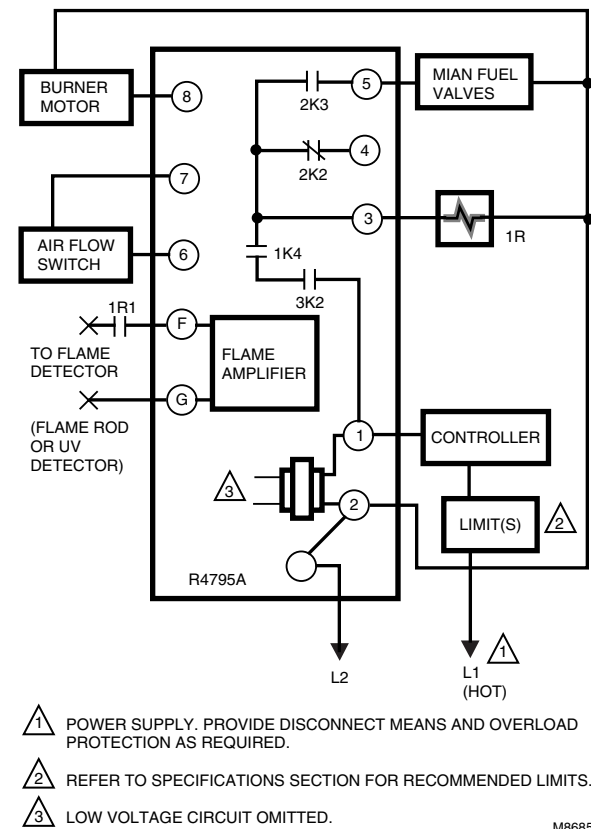

- 1 POWER SUPPLY. PROVIDE DISCONNECT MEANS AND OVERLOAD PROTECTION AS REQUIRED.
- 2 REFER TO SPECIFICATIONS SECTION FOR RECOMMENDED LIMITS.
- 3 LOW VOLTAGE CIRCUIT OMITTED.

M8685

Fig. 6—Flame detector wiring.

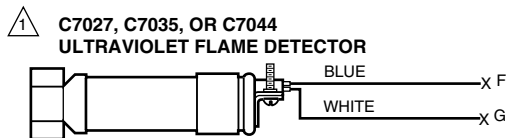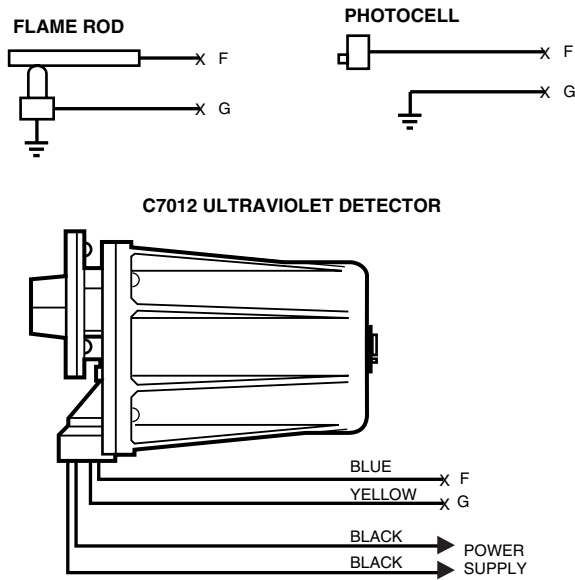

⚠ C7027, C7035, AND C7044 FLAME DETECTOR LEADS ARE COLOR CODED BLUE AND WHITE. THE BLUE LEAD MUST BE CONNECTED TO THE F TERMINAL AND THE WHITE LEAD MUST BE CONNECTED TO THE G TERMINAL. THIS CIRCUIT IS DC AND THE UV SENSING TUBE IS POLARITY SENSITIVE. REVERSING THE LEADS EVEN MOMENTARILY CAN DAMAGE OR DESTROY THE UV TUBE.

M8686


Mounting R4795 On Subbase

Make sure that the power supply is disconnected.

Loosen the thumbscrew and remove the cover (see Fig. 8).

Position the R4795 over the Q270 Subbase. Start all ten mounting screws and tighten uniformly. These screws complete electrical circuits (terminal 1 excepted) and hold the R4795 to the subbase.

Fig. 7—Alarm terminal connections.

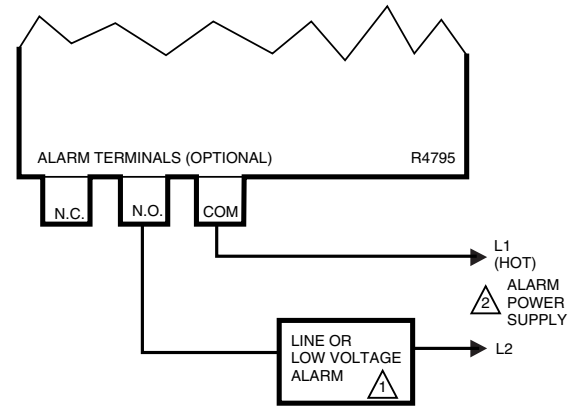

- ⚠** IF A LINE VOLTAGE ALARM IS USED, THE R4795 MUST BE MOUNTED IN A SUITABLE ENCLOSURE.
- ⚠** POWER SUPPLY MUST MATCH THE ELECTRICAL RATINGS OF THE ALARM. PROVIDE DISCONNECT MEANS AND OVERLOAD PROTECTION AS REQUIRED.


M8687

! CAUTION

Do not overtighten the mounting screws because damage to the circuit board can result. Maximum recommended torque is 10 lb-in. (1.13 N•m).

Replace cover and securely tighten thumbscrew.

Fig. 8—R4795 and Q270 Subbase.

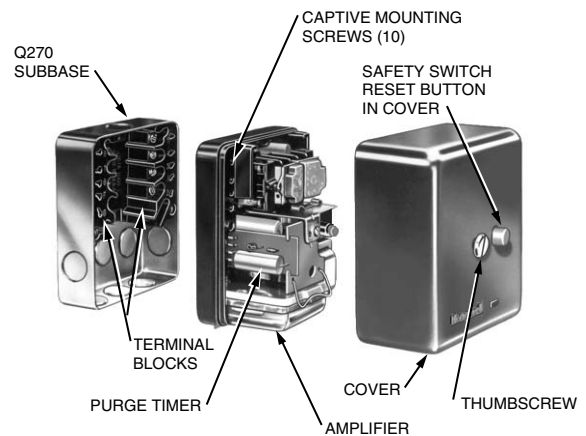

M8688



CAUTION

Use extreme care while testing the R4795; line voltage can be present on most terminals when the power is On.

CHECKOUT SUMMARY

The following list summarizes the checkout tests required for each type of installation. Instructions for each test are included in this section.

Preliminary Inspection: All installations.

Flame Current Check: All installations.

Pilot Turndown Test: If a pilot must be proved before the main fuel valves can open.


Hot Refractory Hold-in Test: Photocell oil installations only.

Ignition Spark Response Test: All ultraviolet detector applications.

Safe Shutdown Tests: All installations.


Refer to Fig. 2 to 3 for terminal location, and to Fig. 9 and 10 for location of component parts. Loosen thumbscrew to remove cover.

Fig. 9—Internal components of R4795A.

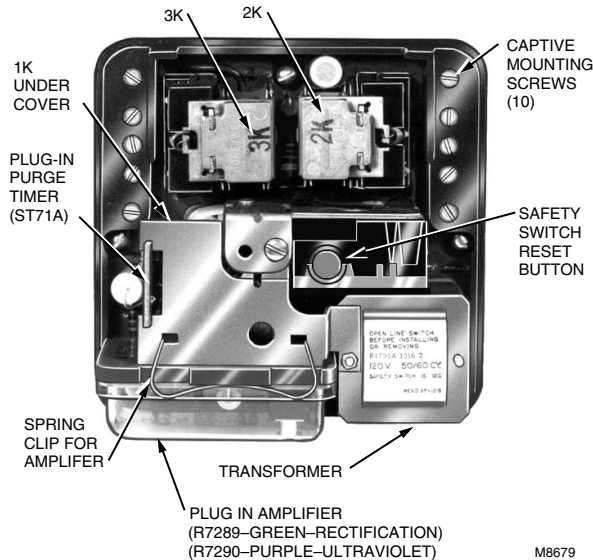

M8679

Fig. 10—Internal view showing amplifier and test jack for flame current test.

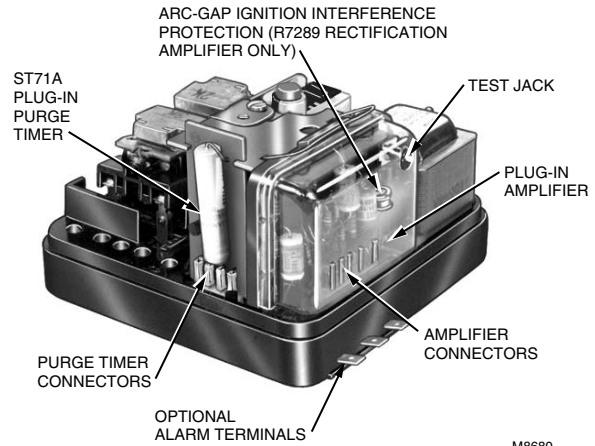

M8680

PRELIMINARY INSPECTION

Make certain that:

1. Wiring connections are correct and all terminal screws are tight. Use a meter to check the continuity of all circuits.
2. Flame detector is installed and positioned properly. Consult the appropriate installation instructions.
3. Ambient temperature at flame detector does not exceed maximum rated temperature.
4. Correct combination of amplifier and flame detector is used. Refer to Plug-In Flame Signal Amplifiers in Specifications section.
5. Burner is completely installed and ready to fire; fuel lines are purged of air.
6. Combustion chamber and flues are clear of fuel.
7. Power is connected to system disconnect switch (master switch).
8. Safety switch is reset; push in and then release the green safety switch.
9. All limits and interlocks are reset.

IMPORTANT: Anytime you reset the safety switch, wait at least one minute after it trips to allow the heater to cool before pushing in the reset button.



CAUTION



Make initial pilot lightoff with manual main fuel shutoff cock closed.

FLAME CURRENT CHECK

The flame current check is the best indicator of proper flame detector application. Perform the check at the time of installation, and at any time service is done on the system, and at least once a month, or more often, while the system is in operation. This prevents shutdowns due to poor flame signal.

Test by connecting a W136 (or equivalent) to the amplifier and reading the flame current while the burner is operating. (Fig. 11).

Fig. 11—Connecting meter to read flame current.

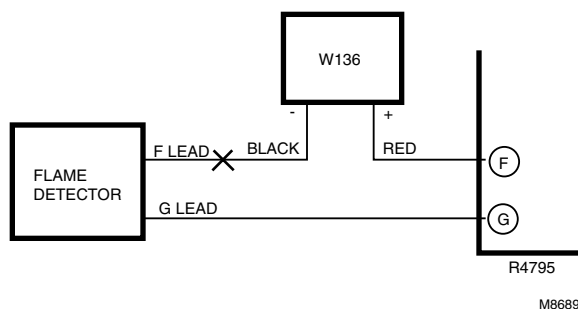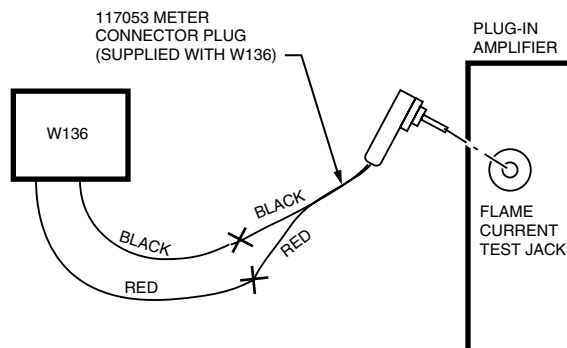

Insert a 117053 Meter Connector Plug, wired color-to-color to the W136 leadwires, into the test jack on the amplifier (Fig. 10). This automatically puts the microammeter in series with the flame detector.

If an R7289A Rectification Type Amplifier is used and a meter connector plug is not available, disconnect the flame detector lead from the F terminal; then connect this lead to the Black lead of the microammeter, and connect the Red lead of the microammeter to the F terminal.

NOTE: If an R7290A Ultraviolet Type Amplifier is used, the flame current *cannot* be read by connecting a microammeter in series with the F lead.

When reading the flame current, assure that the following criteria are met:

1. The flame current is steady; meter does not vary more than a needle width.

2. The flame current is at least two microamperes for R7289A Rectification Amplifier (color-coded green), or at least 1.5 microamperes for an R7290A Ultraviolet Amplifier (color-coded violet).

IF A STEADY READING OF AT LEAST MINIMUM STRENGTH CANNOT BE OBTAINED, ONE OR MORE OF THE FOLLOWING CONDITIONS CAN EXIST:

- Improper supply voltage.
- Defective flame detector wiring including:
 - Open circuits.
 - Short circuits.
 - High resistance shorts caused by moisture, accumulated dirt, or an improper choice of detector leadwire for the particular installation.
- Improper sighting, improper viewing window, or dirty viewing window for optical detectors.
- Improper application of a flame rod including:
 - Insufficient ground area.
 - Poor location of flame rod in flame.
 - Excessive heat on flame rod insulator, greater than 600°F (316°C).
 - Ignition interference.
- Improper application of a vacuum photocell including:
 - Temperature over 165°F (74°C) at photocell.
 - Dirty photocell envelope.
- Defective sensor.

PILOT TURNDOWN TEST

IMPORTANT: If the R4795 is used to prove a pilot flame, perform the following Turndown Test to assure that the main burner can be lit by the smallest pilot flame that will hold in the 2K (flame) relay.

1. Shut off the fuel supply to the main burner *only* by closing the manual main burner shutoff cock. *Do not* shut off fuel supply to the pilot valve.
2. Start the system by raising the setpoint of the controller (or pressing the START button). After prepurge is completed, the pilot will light and pull in the flame relay.
3. Reduce the size of the pilot flame to the turndown condition by slowly closing the manual valve on the pilot gas line. At the turndown condition, the pilot will be small enough so it just barely holds in the flame relay (2K).
 - a. Slowly turn down the pilot until the flame relay drops out.
 - b. Allow the control to complete prepurge.
 - c. As the control attempts to restart the pilot, turn the pilot back up slowly just until relay 2K pulls back in. You will have 15 seconds to complete this step before lockout occurs.
 - d. Again turn the pilot down *slightly* but not enough so the flame relay drops out. If the relay drops out, simply allow the control to complete the purge period and then turn the pilot back up to pull in the flame relay as in step c. above. The closer the pilot is to the dropout condition, the more conclusive the test will be.



CAUTION

Do not manually push in the relays.

4. Check that the pilot is lit and relay 2K is pulled in.
5. Open the manual main burner shutoff cock. Main flame should light within one second. If the burner does not light within one second, close the shutoff cock and shut off power to the relay. Proceed to step 7.
6. If the burner lights, repeat step 5 two or three times to verify lightoff.
7. If the lightoff is unsatisfactory, readjust the flame detector to require a larger pilot flame to hold in the flame relay. This usually requires:
 - a. Resighting a photocell or UV type detector farther out on the axis of a pilot flame, or
 - b. Adjusting a flame rod detector so that a larger minimum pilot is required.
8. Repeat the entire turndown test until the flame is established promptly in step 5.
9. Turn up the pilot to full flame at the test completion.

HOT REFRACTORY HOLD-IN TEST (PHOTOCELL OIL INSTALLATIONS ONLY)

If hot refractory holds in the flame relay at the end of the burner-on cycle, the system cannot restart until the relay drops out. Check for hot refractory hold-in by observing the flame relay for immediate dropout at the end of a long burner-on period. If the relay does not drop out, resight the photocell so it does not sight the refractory, or decrease photocell sensitivity using aperture disks or filters.

IGNITION SPARK RESPONSE TEST (UV DETECTORS)

The flame relay should not respond (pull in) to ignition spark. To determine flame detector sensitivity to ignition spark, perform the following test:

1. Shut the pilot and main fuel manual valves.
2. Start the system by raising the controller setpoint or pressing the START button. This should energize the ignition transformer so spark is produced between the electrode and ground.
3. Check the flame relay 2K. The relay should not pull in. The flame signal current should not be more than one-fourth microampere.

4. If relay 2K does pull in, resight the detector farther out from the spark, or away from possible reflection. It may be necessary to construct a barrier to block the ignition spark from the detector view. Continue adjustments until flame detector does not respond to the ignition spark.

IMPORTANT: Repeat ALL required checkout tests after all adjustments are complete. ALL tests must be satisfactory when the flame detector is in its FINAL position.

SAFE SHUTDOWN CHECKS

Limit Action

With the burner operating, lower the high limit setting to simulate an overheated boiler or furnace. Normal shutdown should occur. Restore the normal limit setting; the burner should go through a normal prepurge and start.

Using manual reset limits is desirable to prevent the system from cycling off the high limit and to assure that the condition that caused the limit action is detected as soon as possible.

Flame Failure

Let burner operate five minutes; then manually shut off fuel supply to simulate flame failure. Relay should drop out and fuel valve(s) close. The system will purge and then lock out on safety. Let the safety switch cool for one minute; reopen manual fuel valve, and reset safety switch. Burner should start.

Power Failure

Let the burner run five minutes. Then simulate power failure by opening the line switch. All relays should drop out and the fuel valves should close. After a minimum of five seconds, close the line switch. The R4795 should go through a normal cycle.

IMPORTANT: At the completion of all Checkout tests, make sure that the R4795 is not on safety lockout, that the pilot is turned up to its normal level, and that all limit settings are correct. Operate the system through one normal cycle. Replace cover and securely tighten thumbscrew.